

# Rotary Index Table Spare Parts List

**RT 40 – 2 BR2**  
**RT 40 – 4 BR2**

## Spare Parts

Pos.	Part no.	Quantity	Description	Type	Flag. <sup>1</sup>
10	394996	1	housing	RT 40-2	
20	396516	1	shaft for slewing system	RT 40-2	
30	285281	2	cap	RT 40	
40	396435	1	pressure disc	RT 40	
50	398500	2	piston	RT 40-2	
60	267518	1	deep groove ball bearing	Ø75xØ45x16 DIN 625	R
70	278247	1	deep groove ball bearing	Ø85xØ65x13 DIN 625	R
80	212583	2	rod seal	Ø20xØ29x2,8	RD
90	201804	2	o-ring	Ø54 x 3	RD
100	285045	2	o-ring	Ø56 x 2	RD
110	227487	8	expander seal plug	MB 700-070	
120	201419	2	retaining ring	I65 x 2,5	
130	278269	10	parallel pin	6m6 x 10 DIN 7	
140	200475	6	countersunk head screw	M3 x 8 DIN 7991	
150	200144	8	cap screw	M5 x 12 DIN 912	
160	200148	2	cap screw	M5 x 20 DIN 912	
170	200975	8	lock washer	S 5	
180	214090	2	washer	A5,3 DIN 125	
190	396508	1	sensor bracket right	RT 40-2	
200	396579	1	sensor bracket left	RT 40-2	
210	396901	1	limit switch sheet right	RT 40-2	
220	396899	1	limit switch sheet left	RT 40-2	

## spare parts sets / accessories

Pos.	Part no.	Quantity	Description	Type	
	1226400	1	repair kit	RT 40 BR2	
	387001	1	seal kit	RT 40-3	
230	435729	2	limit switch	T12 P+F	
	444746	2	limit switch	T12 P+F 200mT	

<sup>1</sup> R = included with repair kit, D = included with seal kit

# Rotary Index Table Spare Parts Drawing

RT 40 – 2 BR2  
RT 40 – 4 BR2

